

INSTRUCTIONS FOR UNDERWATER LIGHT SHOW & FOUNTAIN™



NOTE: This product should be operated in at least 12 inches of water to get the maximum water height.

IMPORTANT: Place in water before turning on fountain.

BATTERY INSTALLATION

Make sure the product is thoroughly dry before replacing batteries.

1. Turn cap on battery casing counter clockwise to open.
2. Remove battery cover and insert four (4) "D" batteries.
3. Line up the notch of the battery cover with the notch on the battery casing and press firmly.
4. Screw cap on battery casing and tighten securely to ensure that water does not seep into battery casing.

To replace the batteries in the remote control

1. Unscrew battery door on the back of the remote control.
2. Lift battery door off and remove batteries.
3. Insert two (2) "AA" batteries.
3. Re-insert battery door and screw closed. Make sure to tighten securely.

NOTE!

- Use Alkaline batteries only.
- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove exhausted batteries promptly and dispose of properly.
- Batteries are to be inserted with the correct polarity.
- Do not dispose battery into fire.
- Non-rechargeable batteries are not to be recharged.
- The supply terminal is not to be short circuited.

ON/OFF & SELECTING THE LIGHT SHOW

All the shows can be controlled by using the button on the unit or by the remote control.

The Underwater Light Show and Fountain offers multiple light shows for the fountain and for the underwater light show. Mix & match the fountain and the underwater light shows to create your own water and light fantasy. There are many combinations to choose from.

FOUNTAIN SHOWS

Disco Party
Starry Night
Color Shifter
Randomly cycles through all shows
Fountain can be turned on without the lights

UNDERWATER LIGHT SHOWS

Lights Flash Randomly
Chasing Lights
Two Speed Flashing
Color Changing
All Lights On
Randomly cycles through all shows

NOTE!: It is recommended to check filter screen at bottom of unit periodically to ensure proper water flow.

ON/OFF/MODE BUTTON ON UNIT

The left side of the button controls the fountain light show; the right side controls the underwater light show.

- To turn on, press the button once.
- Pressing the button again will select the next light show.
- To turn off, press and hold the button down until the product shuts off (approximately 3 seconds).



ON/OFF/MODE BUTTON ON REMOTE CONTROL

- The top half of the button controls the fountain light show; the bottom half controls the underwater light show.
- To turn on, press the button once.
- Pressing the button again will select the next light show.
- To turn off, press and hold the button down until the product shuts off (approximately 3 seconds).



FOUNTAIN

UNDERWATER
LIGHT SHOW

IMPORTANT: Do not submerge unit in water as this could damage the electronic components. Make sure lid is securely fastened before use. Remove from pool when not in use or while cleaning so unit is not damaged by skimmers or other devices.

WARNING: SEIZURES - PEOPLE WITH PHOTOSENSITIVE EPILEPSY CAN HAVE SEIZURES TRIGGERED BY FLICKERING OR FLASHING LIGHTS SUCH AS STROBE OR DISCO LIGHTS.

KEEP OUT OF REACH OF CHILDREN. THIS IS NOT INTENDED AS A TOY.

CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

LIMITED WARRANTY STATEMENT

General Terms This Limited Warranty applies to the product enclosed ("the Product") distributed by Great American Duck Races, Inc., an Arizona corporation, doing business as Great American Marketing and Events ("GAME"), sold with this Limited Warranty Statement. This Limited Warranty is applicable in all countries.

• GAME warrants that the Product you have purchased from GAME is free from defects in materials or workmanship under normal use during the warranty period. The warranty period starts on the date of purchase and continues for ninety (90) days. Your dated sales or delivery receipt, showing the date of purchase of the Product, is your proof of the purchase date. • During the warranty period, GAME will repair or replace any defective parts with new parts, or, at GAME's discretion, used parts that meet or exceed performance specifications for new parts. All parts removed under this warranty become the property of GAME. The replacement part takes on the warranty status of the removed part or product. • This Limited Warranty does not apply to expendable parts. This Limited Warranty does not extend to any product from which the serial number has been removed or that has been damaged or rendered defective (a) as a result of accident, misuse, abuse or other external causes; (b) by operation outside the usage parameters stated in the Instruction Sheet that shipped with the Product; (c) by the use of parts not manufactured or sold by GAME; or (d) by modification or service by anyone other than GAME.

Limitation of Liability GAME is not liable for any damages caused by the Product or the failure of the Product to perform, including any direct or indirect damages for personal injury, lost profits, lost savings, incidental damages, consequential damages, or any other pecuniary loss arising out of the use or inability to use the Product. GAME is not liable for any claim made by a third party or made by you for a third party. • This limitation applies whether damages are sought, or a claim made, under this Limited Warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised GAME or an authorized representative of GAME of the possibility of any such damages.

EXCEPT AS EXPRESSLY SET FORTH IN THIS LIMITED WARRANTY, GAME MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. GAME EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS WORLDWIDE LIMITED WARRANTY STATEMENT.

WARNING: GAME™ has in the past, and will in the future, take any and all legal steps necessary in order to protect our proprietary trademarks, patents, trade dress, and copyrights. This applies to, but is not limited to, products, product design, graphics, packaging and literature. We will prosecute to the fullest extent of the law any persons or entities who infringe upon these rights.



Great American Merchandise & Events (GAME)
16043 N. 82nd Street
Scottsdale, AZ 85260 - 1800 USA

tel: 888DUCKY88 (382.5988)
fax: 602.957.POOL (7665)

email: products@game-group.com
www.game-group.com